




Proper Needle Insertion into QualiTru™ Septum

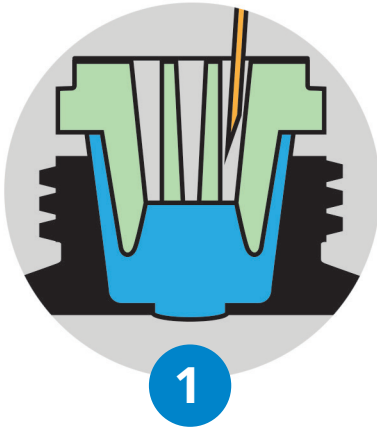


Line the hypodermic needle up with the channel you plan to use.

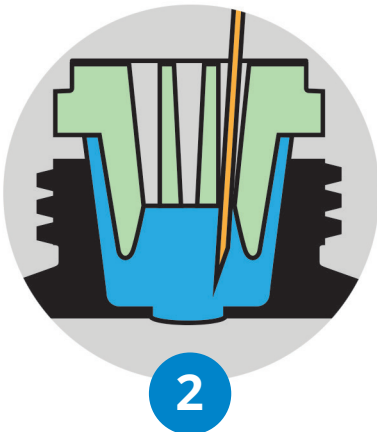


Face the bevel of the needle outward, or toward the outer ring.

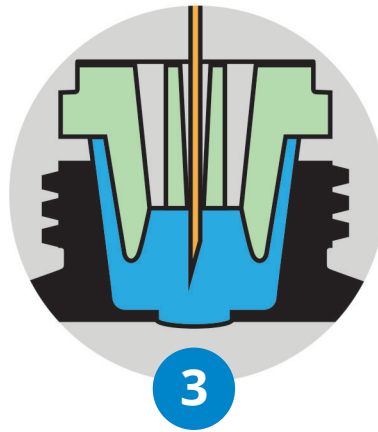

Slowly push the hypodermic needle until you meet resistance.

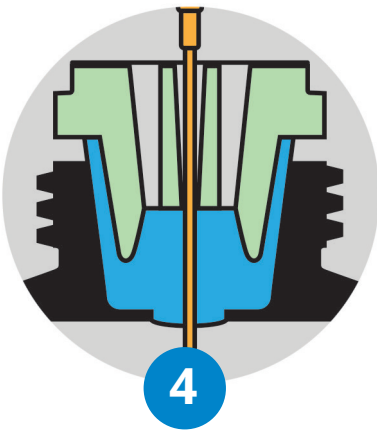

Gently continue through the rubber until you can push no further.

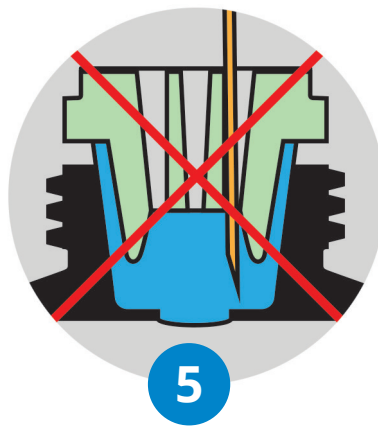


Do not spin or twist on the way through, as you could core the rubber.


QUALITRU
SAMPLING SYSTEMS
qualitru.com


keydiagnostics

T: 02 8212 4074 F: 02 9423 6992
info@keydiagnostics.com.au
www.keydiagnostics.com.au
PO Box 1038, Gympie, NSW, 2227


Inserción correcta de una aguja en el tabique QualiTru™

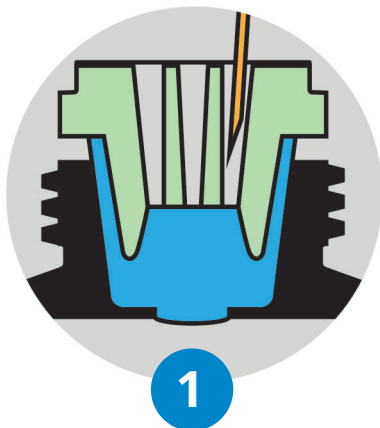


Alinee la aguja hipodérmica con
el canal que planea usar.

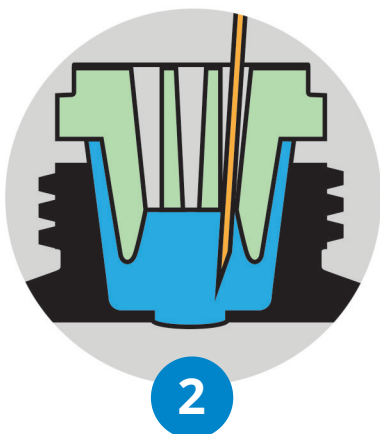


Coloque el bisel de la aguja en dirección
hacia afuera o hacia el anillo exterior.

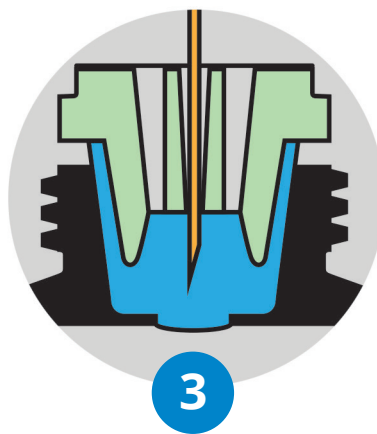

Empuje lentamente la aguja hipodérmica
hasta encontrar resistencia.

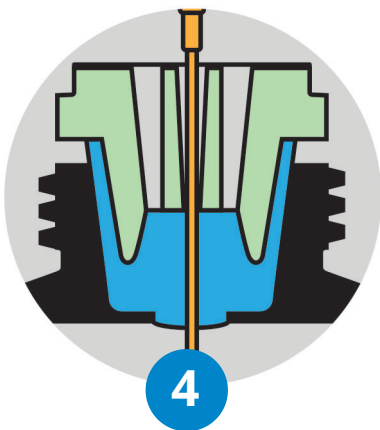

Suavemente, continúe
empujando a través de la goma
hasta que ya no pueda hacerlo.

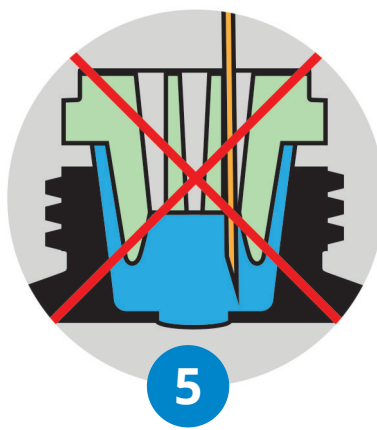

No gire ni haga un movimiento
de rotación a medida que
atraviesa la goma, ya que
podría desprenderla.